





# STB Installation Guide


## ■ Composition

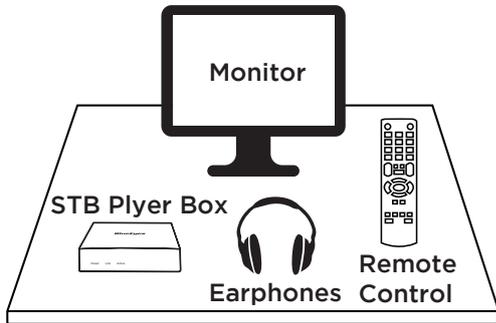

## ■ Front Panel

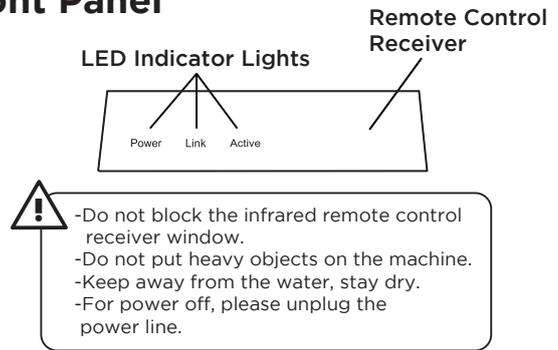

## ■ Rear Panel

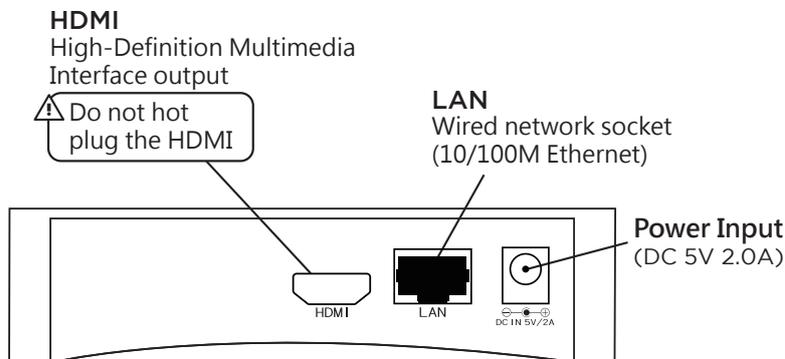

### Notice for STB

- ① You can mark the STB, it would be easier to identify.
- ② When you shut down STB, it would ask you to login again. In this case, you can reboot it without enter the account and password again.
- ③ We advise you that never shut down STB, the power consumption is only about (10W).

### Notice for Remote Control


- ① We recommend using secondary battery. Do not use alkaline battery.
- ② We recommend taking battery out of remote control when nobody use it.
- ③ The infrared ray receiver of STB can't be blocked by anything.
- ④ No matter using the student's or the teacher's remote control, they can control the STB player box. But in some classrooms, they would be disturbed because of the seat space allocation. We recommend you to plaster insulation tape on infrared ray and prick a hole. Therefore, remote control won't be disturb by infrared ray.

## ■ STB Network Settings

- (1) Press '9999' at remote control → Select Network → Select Network setting
- (2) Select Ethernet → Select Static IP Settings




- (3) Enter IP address

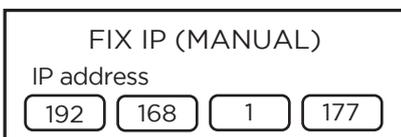

- (4) Push return and select OK to save settings

## ■ Set up Shortcuts of SES / FL / MTS

- (1) Press '9999' at remote control → Select Advance → Select SMB setting
- (2) Select add shortcuts
- (3) Enter Shortcut Name, Account, Password and Server IP

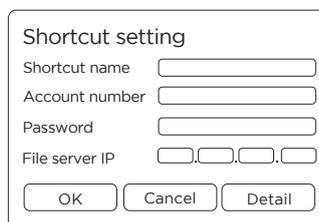

The default password for enter administrator interface is 9999. Highly recommend you to modify the password when install STB for the first time in order to avoid the others to do the setting by mistake.

- (4) Push OK to save settings