iCam® 4K PTZ Installation Guide

▪ Back Panel

SYSTEM	RS422 RS485	ON

3G-SDI | HDMI | USB | LINE IN | SELECT | IN RS232 OUT | + − + − | LAN | DC12V | OFF

- SDI Output
- HDMI Output
- USB 3.0
- Audio In Jack(LINE-IN)
- Rotary Dip Switch
- RS232 Input
- RS232 Output
- RS422 Compatible with RS485
- LAN Jack
- Power In Socket
- Power Switch
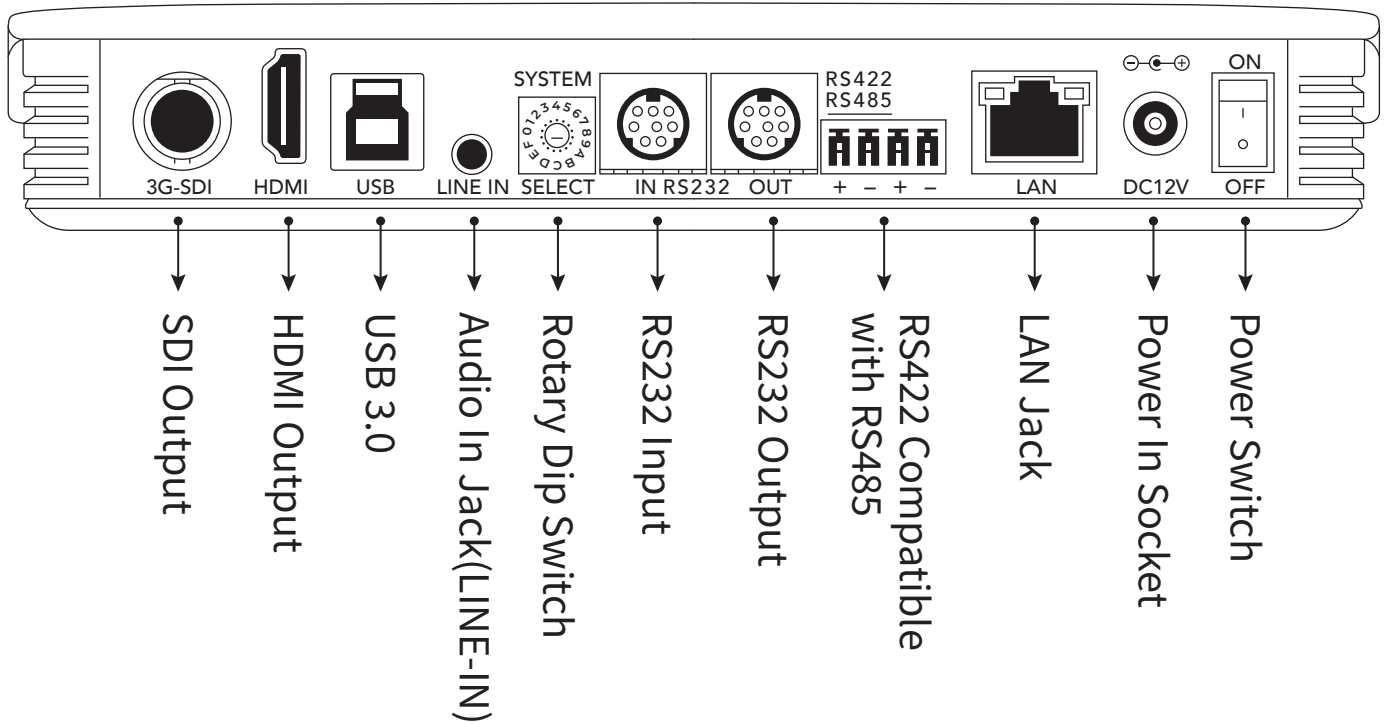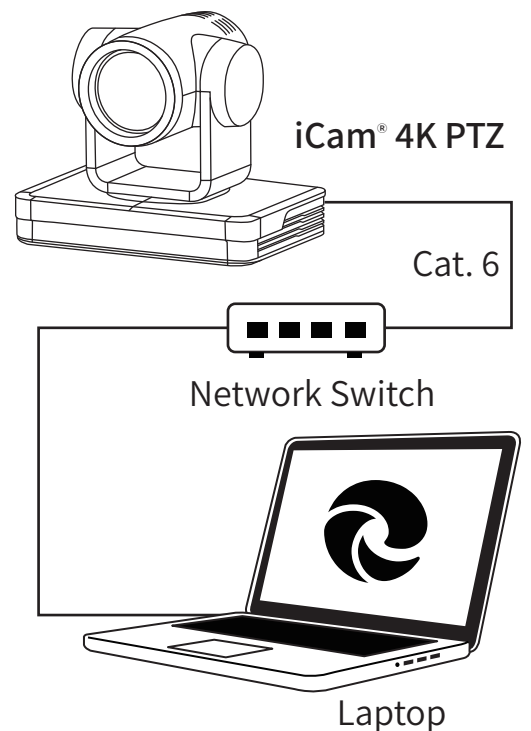
▪ Live Video

Follow these steps to watch live video on the notebook:

1. Open Microsoft Edge browser.

2. Enter the camera IP address.

3. Enter username and password.

4. Choose "Live View" to watch the video.

DEFAULT	
ID	admin
PWD	27507522

⚠ It is recommended to use Internet Explorer mode in Microsoft Edge.

iCam® 4K PTZ

Cat. 6

Network Switch

Laptop